
■ 3.2 Installing/Removing the battery pack

To install the battery pack:

- 1. Slide the lock / unlock latches into the unlock of position.
- 2. Insert the battery pack as shown into the battery compartment until it clicks into place.

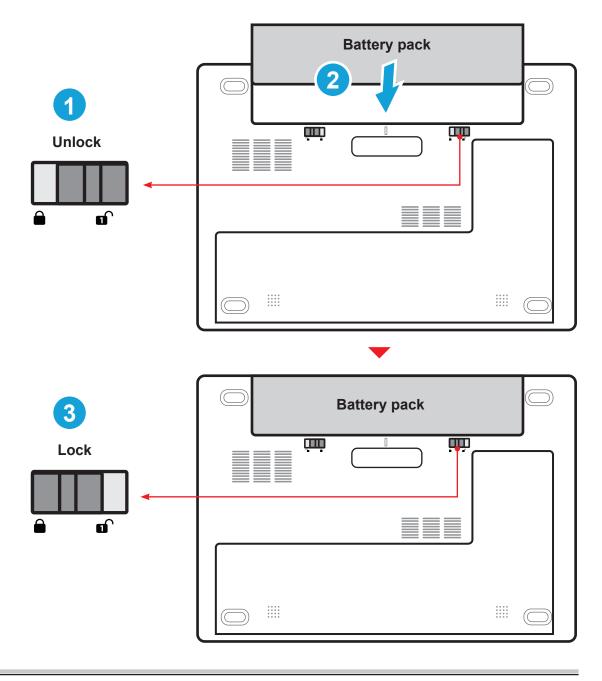




NOTE: Never attempt to install/remove the battery pack while the notebook pc is turned ON, as this may result in the loss of working data.

To remove the battery pack:

- 1. Slide the lock / unlock latches into the unlock of position.
- 2. Slide and hold the battery relesase latch into unlock position, then remove the battery pack.

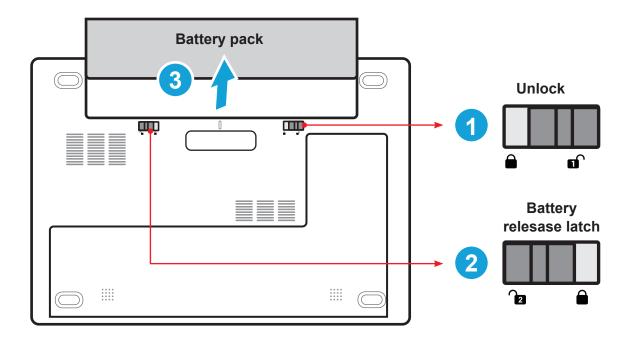



CAUTION! Only use batteries that are approved by an authorized dealer. All batteries are not the same and therefore should not be treated as such. Using the wrong battery could cause serious damage to your notebook pc and yourself through toxic emissions.



CAUTION! Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions. Never remove the battery pack while the power is on as this may result in data loss when the system loses power.